

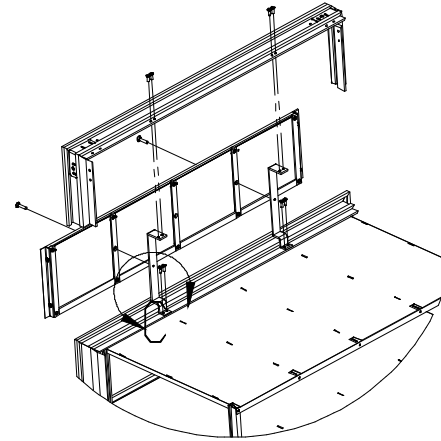


2600 DIRECTORY INSTALL

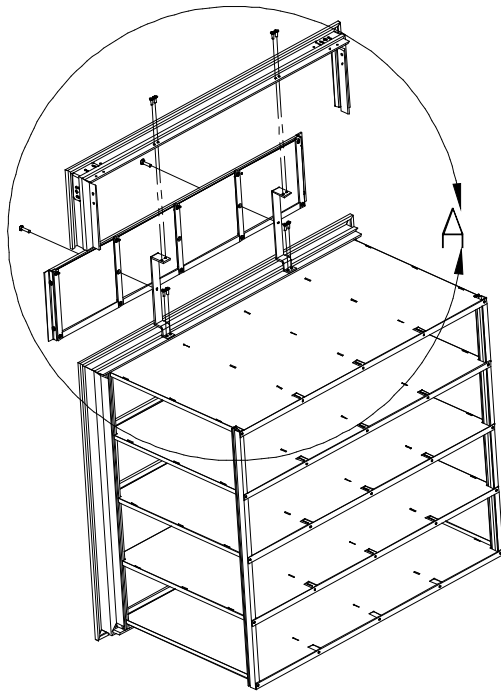

DETAIL A

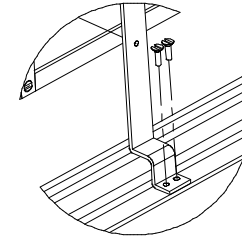

DETAIL C
SCALE 1 : 4

NOTES:

1. SCREW MOUNTING BRACKETS TO TOP OF BOX TRIM AS SHOWN IN DETAIL C-C
2. SLIDE DIRECTORY TRIM DOWN ONTO MOUNTING BRACKETS AND ATTACH WITH SCREWS AS SHOWN IN DETAIL A-A
3. SLIDE DIRECTORY INTO TRIM AND ATTACH WITH LONG SCREWS INTO MOUNTING BRACKETS AS SHOWN.
4. DIRECTORY LABELS MAY BE CHANGED BY BACKING OUT THE LONG MOUNTING SCREWS PARTIALLY AND SLIDING DIRECTORY OUT FOR CLEARANCE.

AUTH AF FLORENCE

5935 CORPORATE DRIVE, MANHATTAN, KANSAS 66503

www.auth-florence.com

(800) 275-1747

THIS DRAWING IS THE SOLE PROPERTY OF AUTH-FLORENCE MANUFACTURING. NO CLAIMS, PRESENT OR FUTURE, IN THE MATERIAL, REPRODUCED, IT IS ISSUED IN CONFIDENCE FOR ENGINEERING INFORMATION ONLY AND MAY NOT BE COPIED OR USED FOR INFORMATION BY MANUFACTURE OF ANYTHING, SHOWING WITHOUT SPECIFIC PERMISSION FROM AUTH-FLORENCE MANUFACTURING. COPYRIGHT AUTH-FLORENCE 2004