

INSTALLATION INSTRUCTIONS FOR ARROW LOCK DOOR SECURITY KIT
FOR AUTH-FLORENCE 1250 VERTICAL MAILBOX
(KIT #KL41705)

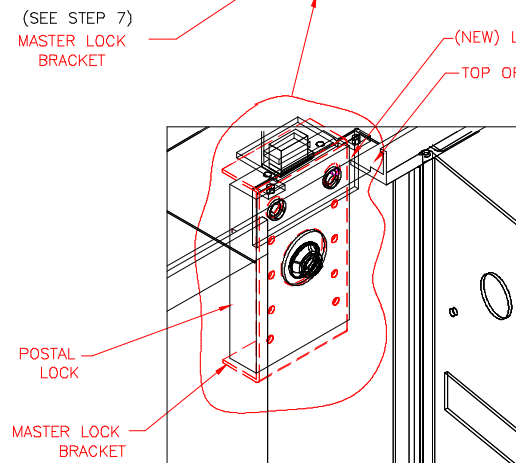
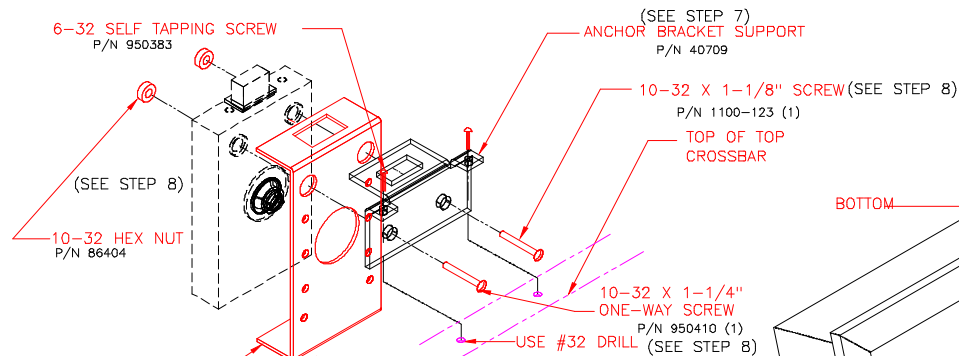


FIG. C
(SEE STEP 7)

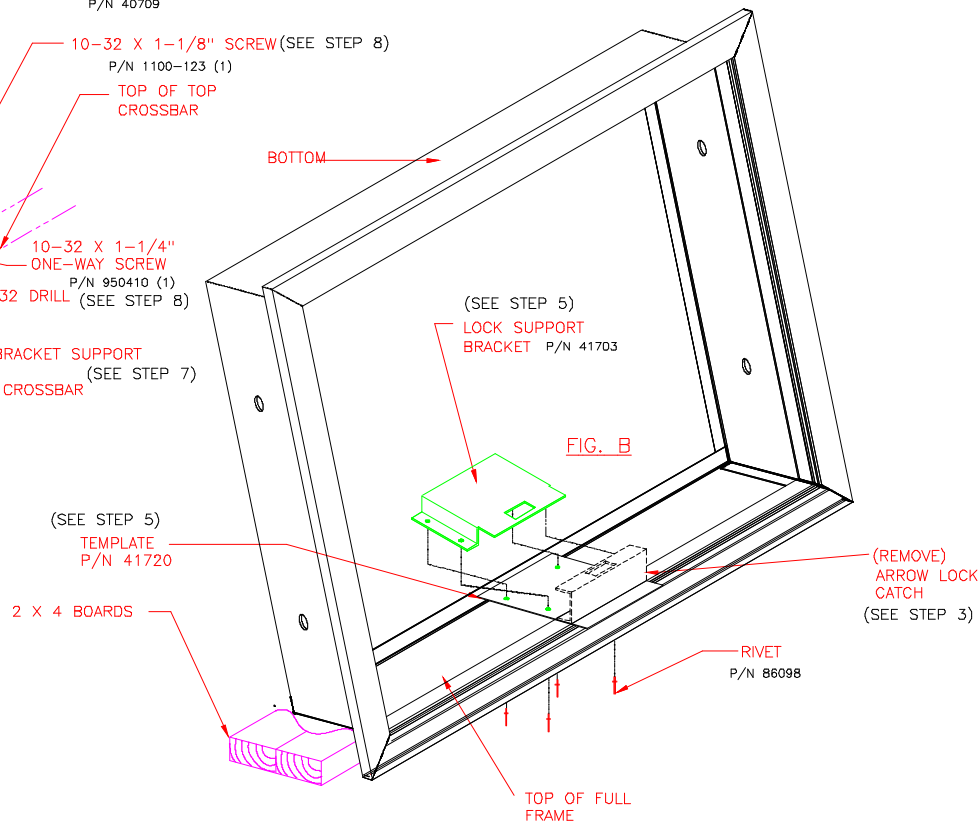


FIG. A
(SEE STEP 4)

EXPLANATION OF STEPS ON PAGE 1