




ARCHITECTURAL  
MAILBOXES®

# Wall Mount Mailbox | Model 2507 MOUNTING INSTRUCTIONS




**IMPORTANT!** This  
mailbox is intended to be  
mounted under an eave or  
another protected area.

## Hardware (included)




x 4, screws



x 4, plastic anchors

## Tools (not included)


One Drill

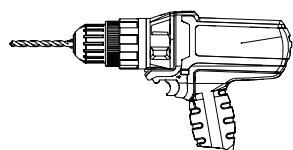

One Phillips Screwdriver




One Drill Bit



1/4" masonry bit or 1/16"  
wood bit

**1** Using the guide on the back of these instructions, mark the wall at the center of each crosshair. Use a level to ensure a straight installation (optional).

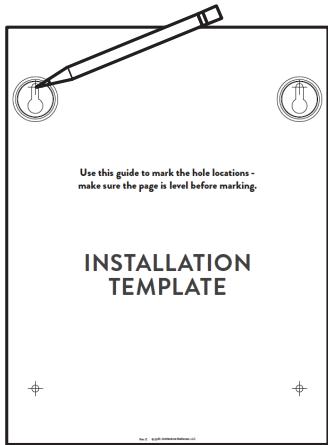


**2** Drill into the wall at each marked location. Use a 1/4" drill bit for brick or other masonry wall. Use a 1/16" drill bit for wood wall.

1/4" masonry bit

- or -

1/16" wood bit

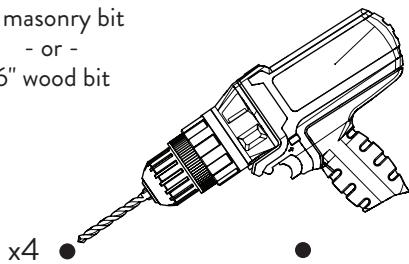


**3** Skip this step if installing into wood.



Insert the included plastic anchors into the drilled holes. Gently tap them in if necessary.



**4** Insert the screws into the top two drilled holes and secure with a screwdriver. Hang the mailbox onto the secured screws using the top eyelet holes on the back of the mailbox.

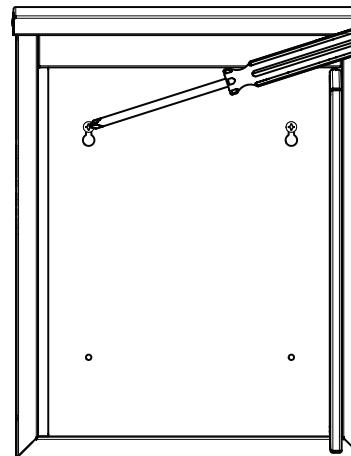

**5** While the mailbox is hanging on the top screws, insert the remaining two screws into the bottom holes and secure with a screwdriver.

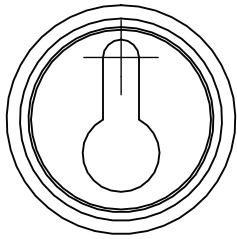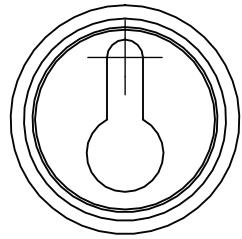

**Use this guide to mark the hole locations -  
make sure the page is level before marking.**

# INSTALLATION TEMPLATE

