



ARCHITECTURAL  
MAILBOXES®


# Wall Mount Mailbox | Model 2576

## Mounting Instructions




**IMPORTANT!** This mailbox is intended to be mounted under an eave or another protected area.

### Hardware (included)




x 4, screws



x 4, plastic anchors

### Tools (not included)


One Drill

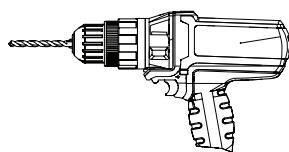

One Phillips Screwdriver



One Drill Bit



1/4" masonry bit or 1/16" wood bit

**1** Using the guide on the back of these instructions, mark the wall at the center of each crosshair. Use a level to ensure a straight installation (optional).




**2** Drill into the wall at each marked location. Use a 1/4" drill bit for brick or other masonry wall. Use a 1/16" drill bit for wood wall.

1/4" masonry bit


- or -

1/16" wood bit

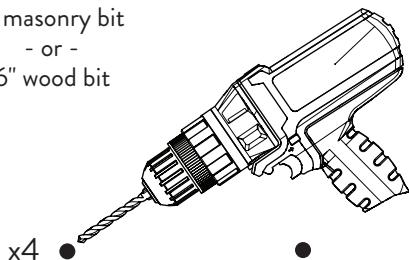


**3** Skip this step if installing into wood.

Insert the included plastic anchors into the drilled holes. Gently tap them in if necessary.


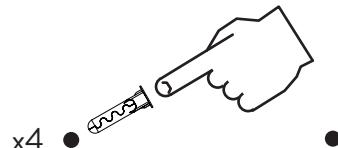


x4 ●

**4** Insert the screws into the bottom two drilled holes and secure with a screwdriver. Hang the mailbox onto the secured screws using the bottom eyelet holes on the back of the mailbox.

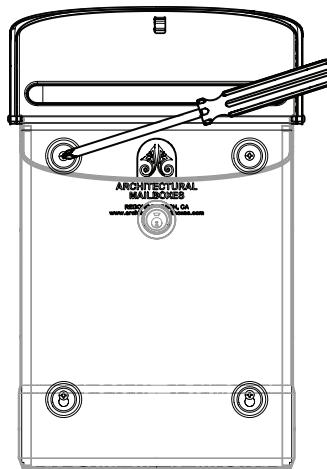

**5** While the mailbox is hanging on the bottom screws, insert the remaining two screws into the top holes and secure with a screwdriver.

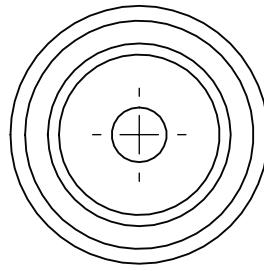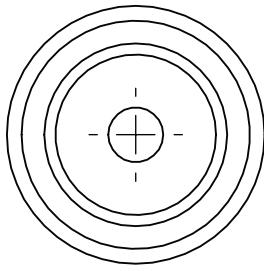

**Use this guide to mark the hole locations -  
make sure the page is level before marking.**

# INSTALLATION TEMPLATE

