


# INSTALLATION

## Mounting Instructions



### Mounting a BOBI mailbox to a wall or fence

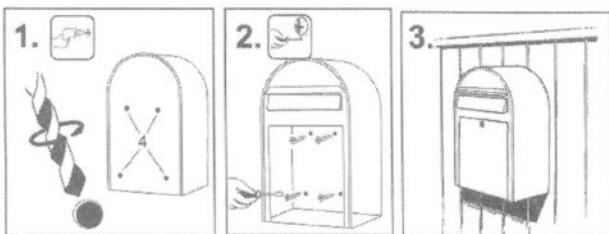


Drill out the 4 preformed holes which are in the back of the mailbox using a  $\frac{1}{4}$ " or 6 mm drillbit.

**Attention!** Holes should be drilled with a low speed drill ( maximum 500 rpm ) and on stainless steel mailboxes it is recommended to use a drillbit for drilling into metal.

Fix the mailbox from inside using the 4 screws provided.

### Mounting a BOBI B mailbox through a fence


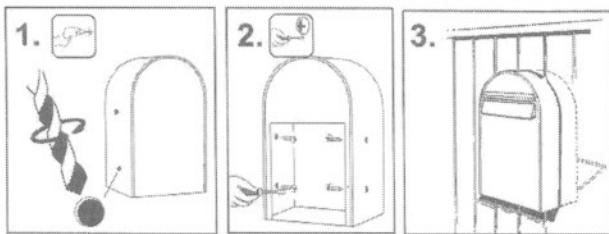


Drill out the 4 preformed holes which are on the side of the mailbox using a  $\frac{1}{4}$ " or 6 mm drillbit.

**Attention!** Holes should be drilled with a low speed drill ( maximum 500 rpm ) and on stainless steel mailboxes it is recommended to use a drillbit for drilling into metal.

Fix the mailbox to the wall from inside using the 4 screws provided.

### Mounting a mailbox on a BOBI ROUND stand

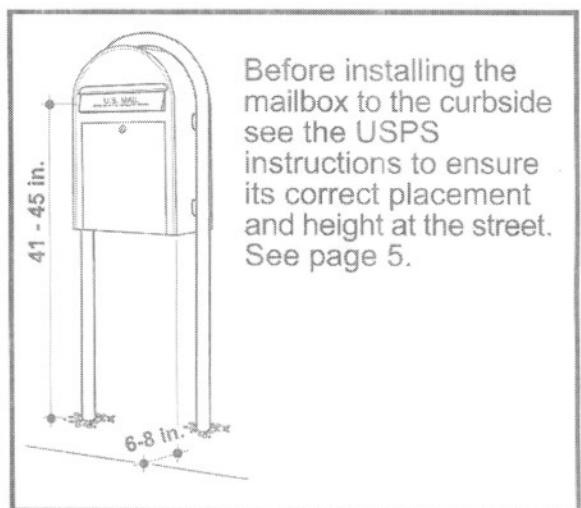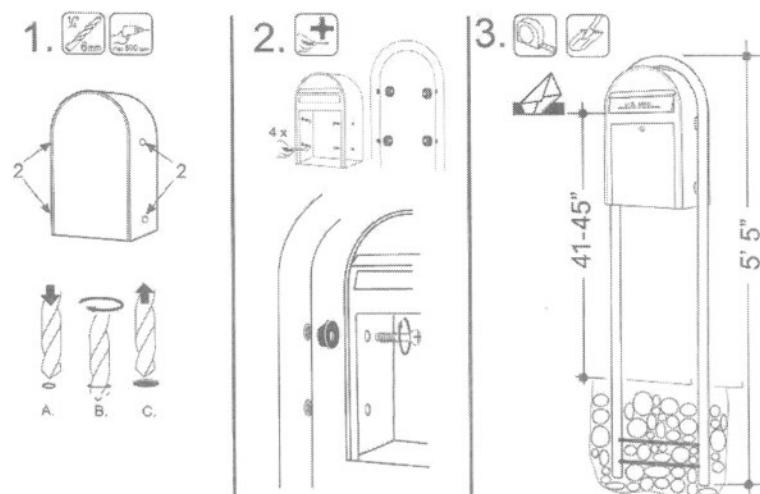

1. Drill out the 4 preformed holes which are on the side of the mailbox using a  $\frac{1}{4}$ " or 6mm drillbit.  
**Attention!** Holes should be drilled with a low speed drill (maximum 500 rpm) and on stainless steel mailboxes it is recommended to use a drillbit made from hardened steel.
2. Fasten the mailbox to the stand using the fittings provided.
3. Dig a hole ca. 17" x 17" x 17". Place the mailbox and stand in the ground, check the level and fill the hole with coarse gravel or concrete. We recommend using a quick set concrete for a secure and solid installation.