



CONCEALED/IN-GROUND MOUNT



1# Thread the decorative brass acorn nuts all the way onto the brass thread rods until they stop.




2# Now thread the previous assembly through one of the threaded mounting holes on the plaque until the acorn nut is snug against the plaque's face. DO NOT over tighten, as this may damage your plaque.



3# Repeat steps #1 & #2 for the second mounting hole on the plaque



4# If ground mounted into dirt, simply slowly & carefully push the protruding rods into the dirt. For a more permanent mount push into wet concrete.

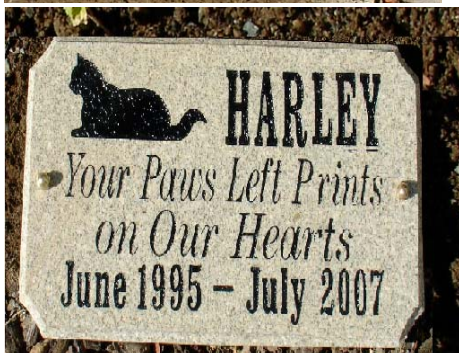

5# To mount onto existing masonry/concrete surface, use a hammer drill or roto hammer to drill into the mounting surface. Then use a high grade two part epoxy to coat the rods & fill the holes. Then push the plaque into position & let dry.