

Customers are required to contact the local post office before installing the mailbox to ensure its correct placement and height at the street. Generally, mailboxes are installed at a height of 41-45 in. from the road surface to inside floor of the mailbox or point of mail entry (locked designs) and are set back 6-8 in. from front face of curb or road edge to the mailbox door.

Curbside Mailboxes

ASSEMBLING INSTRUCTIONS:

Mailbox includes:

- 1 Fully Assembled Mailbox
- 4 1¹/₄" (no. 8) mounting screws
- 1 7¹/₂ x 14 x 3³/₄ mounting board

1¹/₄" screws are supplied for attaching mailbox to mounting board. See fig. 1 (Make sure board does not interfere with door operation.)

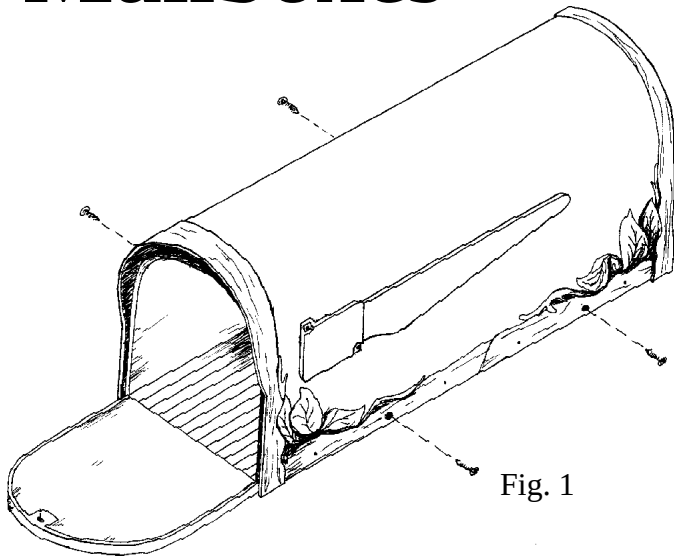


Fig. 1