


Installation Instructions for
LB-997 and LB-998
Locking Insert

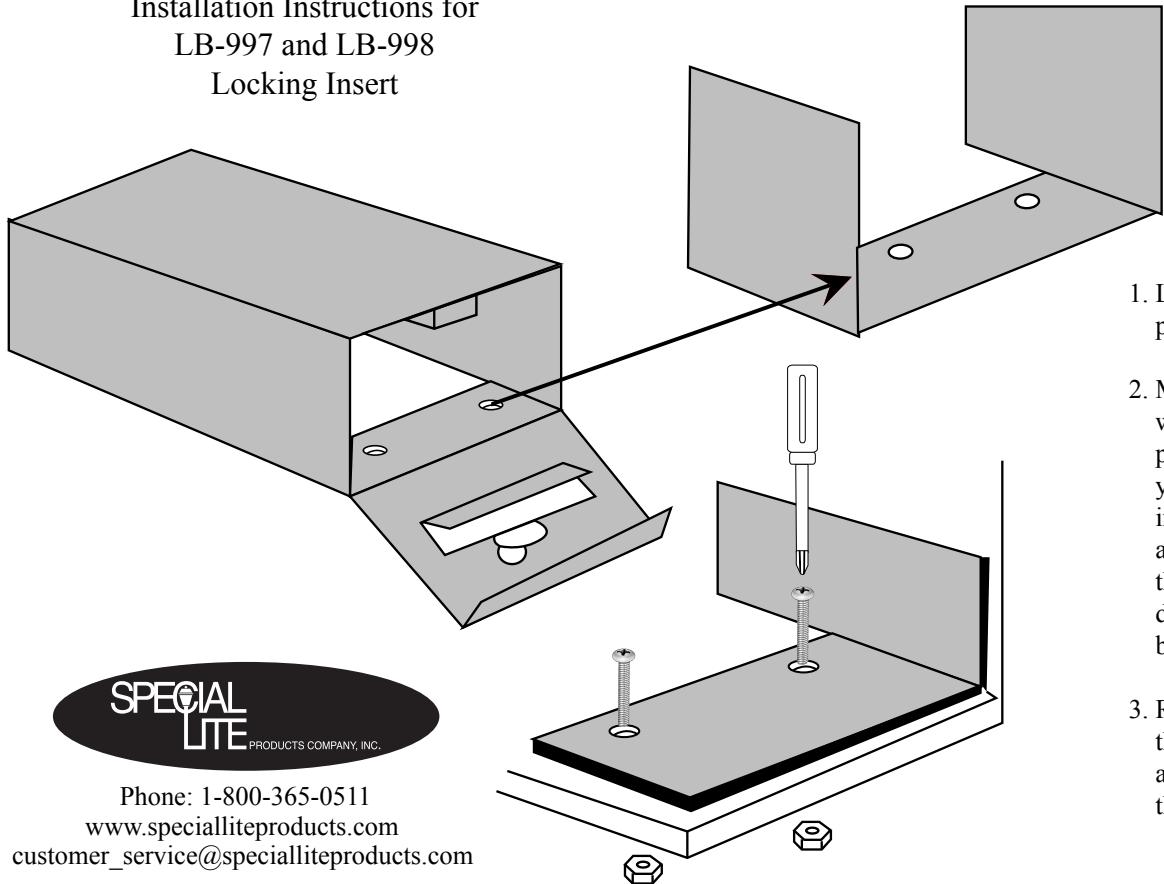

1. Locate holes in bottom plate of locking insert.
2. Most Special Lite mailboxes will have pre-drilled holes to place the lock box over. If your's does not or you are installing the lock box in another brand of box, position the locking insert, mark and drill two holes in the mailbox bottom.
3. Run provided screws through the holes in the locking insert and mailbox and fasten with the included lock nuts.

**SPECIAL
LITE**
PRODUCTS COMPANY, INC.

Phone: 1-800-365-0511
www.specialiteproducts.com
customer_service@specialiteproducts.com