


Floral Post 450

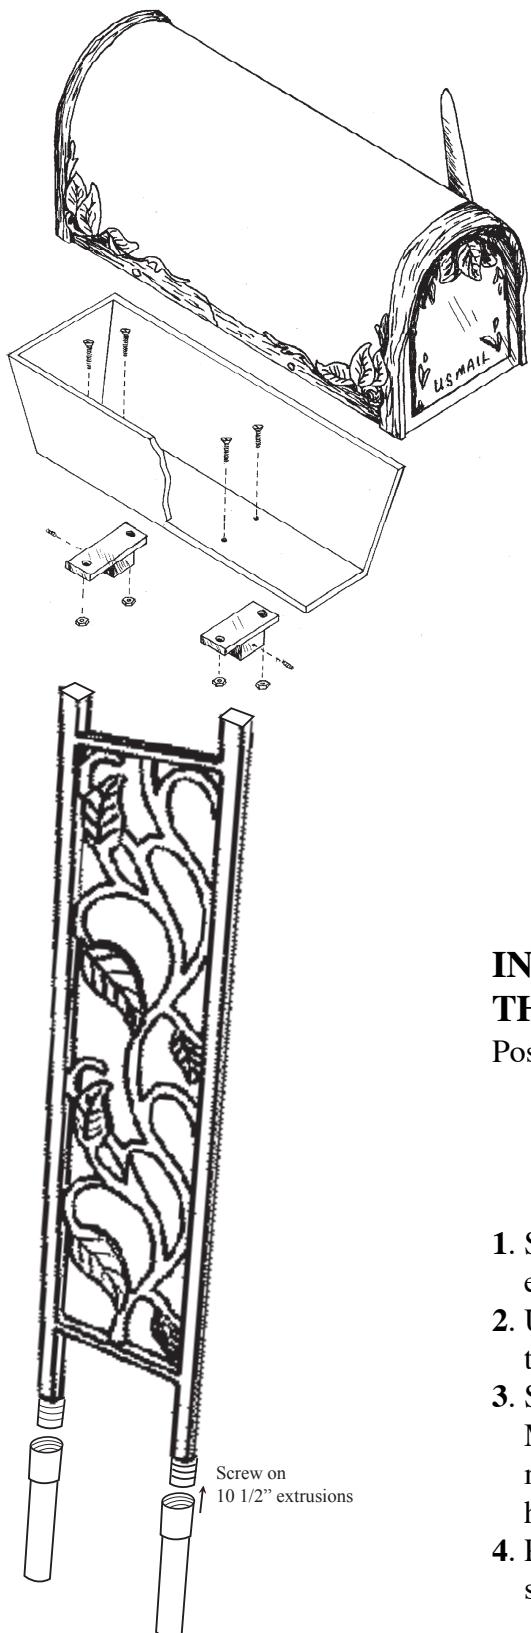

10 1/2" deep
58" high
3/4" wide

INSTALLING YOUR MAILBOX WITH THE FLORAL POST:

Post includes: 2 brackets,

2 extrusions 10 1/2"
4 screws, 1/4 • 20 x 1/2" brass
4 screws, 3/4 • 20 cap nuts

1. Secure aluminum extrusions to bottom of cast post by screwing extrusions to the bottom of the post.
2. U.S. Postal Service requires approximately 40" from ground to mailbox bottom. Secure post assembly in ground.
3. Set brackets in position on post, set mailbox on brackets. Mark through the screw holes for bracket location. Remove mailbox and brackets from post. Drill 1/4" holes in paper holder and assemble with four screws and cap nuts provided.
4. Place mailbox on post assembly and secure with bracket set screws.

SPECIAL
LITE
PRODUCTS COMPANY, INC.

Customers are required to contact the local post office before installing the mailbox to ensure its correct placement and height at the street. Generally, mailboxes are installed at a height of 40-45 in. from the road surface to inside floor of the mailbox or point of mail entry (locked designs) and are set back 6-8 in. from front face of curb or road edge to the mailbox door.