


Installation of the MP-454 Address Plaque

- 1.) Measure and mark drill hole locations centered onto the side of your mailbox based on the template below (DRAWING NOT TO SCALE)
- 2.) Use 3/16” drill bit to make screw holes in the side of your mailbox.
- 3.) Attach provided studs to the back of the MP-454 Address Plaque, then slide studs through your drilled holes.
- 4.) Attach nuts to secure address plaque to mailbox.
- 5.) Repeat for opposite side.

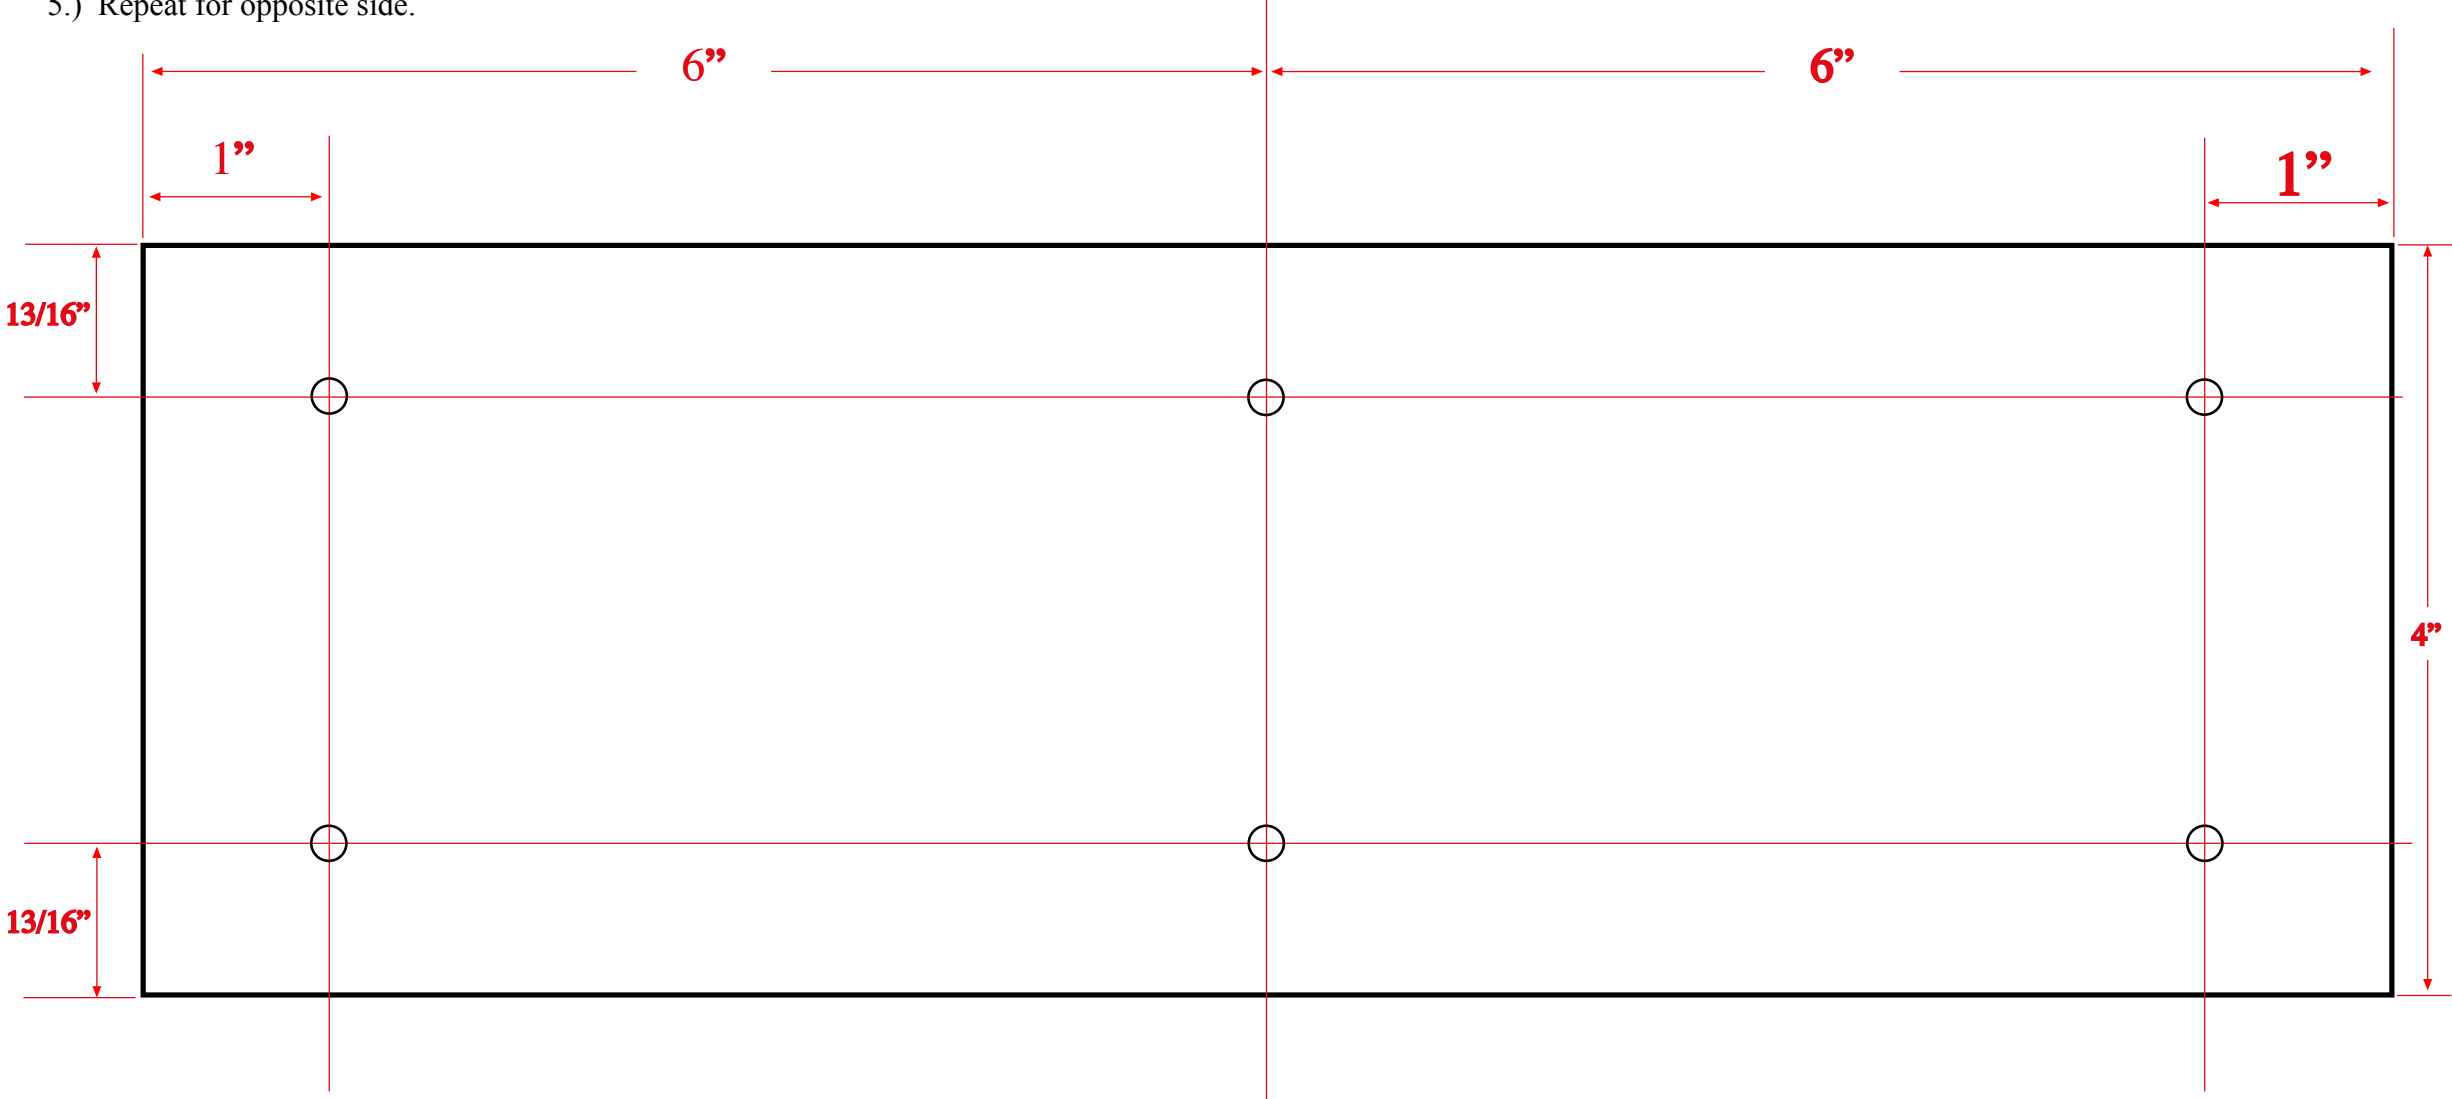

MP-454 Mounting Template

Drawing Not To Scale

all holes 3/16” Dia