


SAP-4190 Boulevard Address Plaque Instructions

1- At the back of the plate,
insert screwdriver in the hole
and push firmly to remove the
cover-screws moulding.

1- À l'endos de la plaque, insérer
le tourne-vis dans le trou, et
pousser fermement pour ôter la
moulure cache-vis.

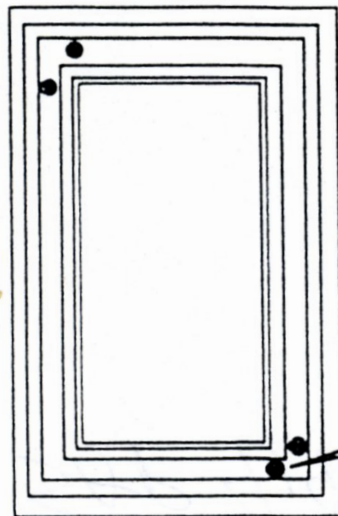

2- For installation, screw inside the
center groove, the number of screws
needed (stainless screws recommended)

3- Hold a strong pressure with your
thumbs or a rubber hammer to put
the moulding back into place.

2- Pour installation, visser à l'intérieur de
la rainure centrale, le nombre de vis requises
(à votre choix, vis stainless recommandée).

3- Exercer une forte pression avec les pouces
ou encore avec un marteau de caoutchouc
pour remettre en place la moulure.

**SPECIAL
LITE**
PRODUCTS COMPANY, INC.

1634 Latrobe-Derry Road • Loyallhanna, PA 15661 • Phone: (724) 537-4711 • Fax: (724) 537-9313
www.specialliteproducts.com • customer_service@specialliteproducts.com