
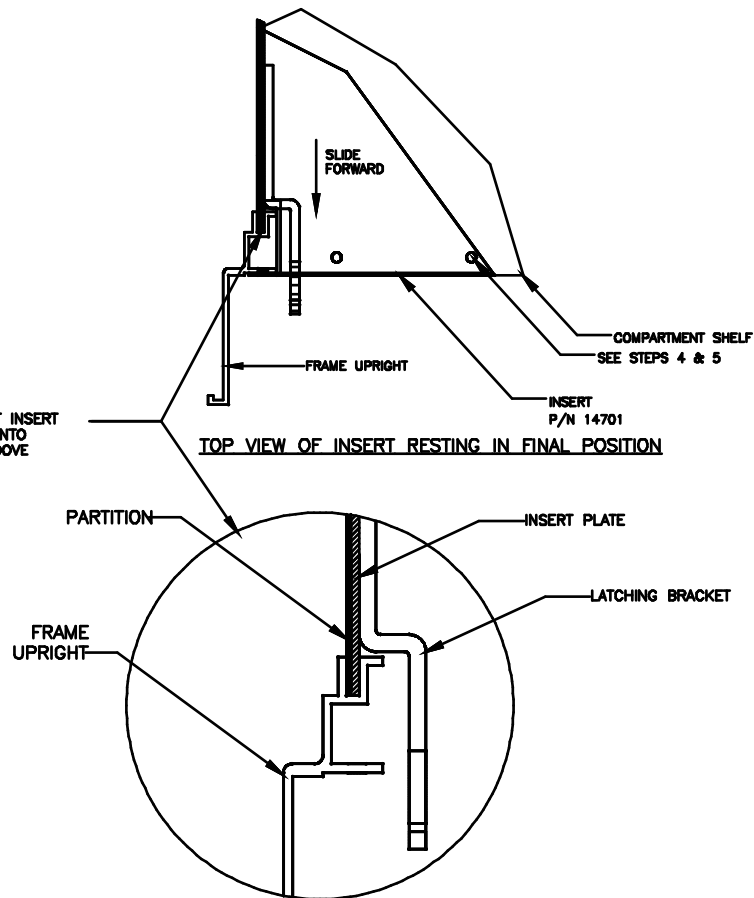


INSTALLATION INSTRUCTION FOR ARROW LOCK DOOR SECURITY KIT
FOR AUTH-FLORENCE 1400 SERIES HORIZONTAL MAILBOX
(KIT #KL14700)
(INSERT INSTALLATION)

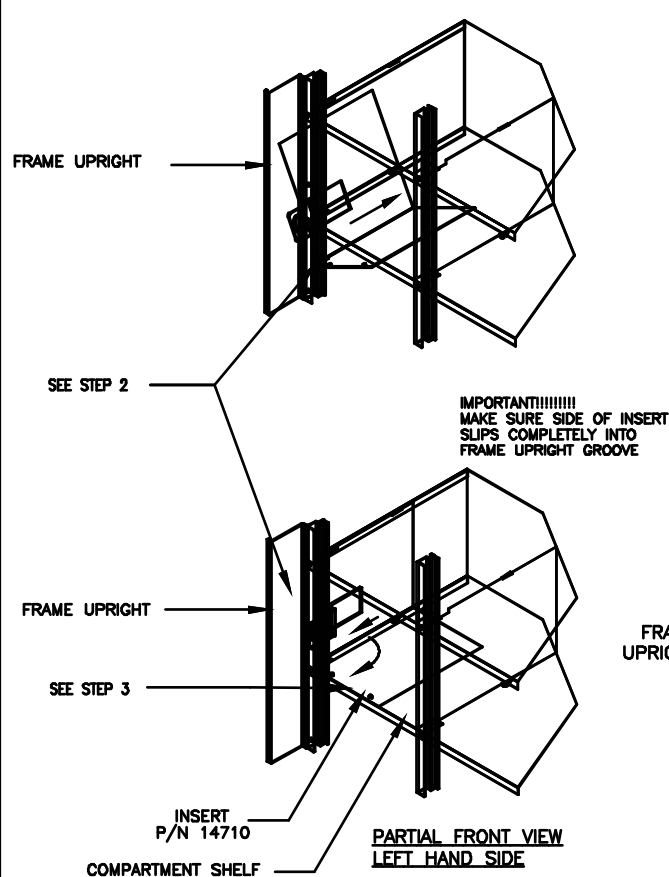

INSERT INSTALLATION NOTES:

- (1) TO BEGIN, REMOVE EXISTING LATCHING BRACKET.
- (2) AT AN ANGLE, PLACE INSERT INTO THE MAILBOX COMPARTMENT (SEE ILLUSTRATION). AS THE INSERT IS PLACED INTO THE COMPARTMENT, ROTATE IT TO THE VERTICAL POSITION AND FLAT ONTO THE COMPARTMENT SHELF.
- (3) MOVE THE INSERT FORWARD AND TO THE LEFT (SEE ILLUSTRATION), MAKING SURE THAT THE FRONT EDGE OF THE INSERT IS EVEN WITH THE EDGE OF THE DIVIDER PLATE.
- (4) USING THE INSERT AS A TEMPLATE, DRILL (2) HOLES (#30 DRILL) THRU THE COMPARTMENT SHELF.
- (5) PLACE RIVETS (INCLUDED) FROM THE TOP INTO HOLES TO SECURE INSERT TO COMPARTMENT SHELF